

# SERVICE MANUAL

PERFORMANCE SIGNAL PROCESSOR

# A2

## CONTENTS

1. SPECIFICATION .....	1
2. STRUCTURAL DIAGRAM .....	2
3. BLOCK DIAGRAM .....	3-a
4. CIRCUIT DIAGRAM .....	3-b, 3-c
5. P.C. BOARDS .....	4
6. CIRCUIT EXPLANATION .....	8
7. CHECK AND ADJUSTMENT .....	10
8. IC CHECK POINT .....	16
9. REFERENCE DATA .....	19
10. PARTS LIST .....	25


# KORG

# 1. SPECIFICATION

- Front panel input : FRONT (GUITAR IN) fixed at - 20dB ( - 5dBm MAX)/1M  $\Omega$
- Back panel input : Input level/impedance : +4dB (+19dBm MAX)/50K  $\Omega$  - 10dB (+5dBm MAX) /50K  $\Omega$
- Back panel output : Output level/impedance : +4dB (19dBm MAX)/470  $\Omega$  - 10dB (+5dBm MAX)/470  $\Omega$   
Headphone out impedance: over 10  $\Omega$
- AD/DA : 16 - bit linear (DA: 4 - times over - sampling digital filter)
- Sampling frequency : 37.1KHz
- Frequency response : 24Hz - 18KHz + 1.5/ - 3dB
- Dynamic range : 90dB
- Memory : No.1 - 100; No.1 - 200 when using card
- Front panel :  
KEY SW : UP,DOWN,DISPLAY SELECT,PARAMETER EDIT,UTILITY,WRITE,POWER SW, DOUBLE FUNCTION EDITOR (A - F, CHAIN/EFFECT(BYPASS))  
Display : Backlit LCD display; 40 characters  $\times$  1 row  
PROGRAM No. display : 7 - segment LED  $\times$  3  
Dot type LEDs : PERFORMANCE,INDIVIDUAL,BYPASS,PARAMETER EDIT,UTILITY  
Input level : 5 - element level meter, with digital clip  
INPUT VOLUME  
PHONES LEVEL  
CARD slot  
GUITAR IN terminal  
PHONES terminal (stereo)
- Rear panel  
Switches : level attenuation switch ( - 10dB/+4dB), MIDI OUT/THRU toggling switch  
LINE IN terminal  $\times$  2 (L/MONO,R)  
OUT PUT terminal  $\times$  2 (L/MONO,R)  
PEDAL/SW input terminal  $\times$  2  
MIDI IN, MIDI OUT/THRU  
REMOTE IN
- Internal effects: REVERB GROUP, COMPRESSOR GROUP, DISTORTION GROUP, DELAY GROUP,STEREO DELAY GROUP, MODULATION DELAY GROUP, MODULATION GROUP, ROTARY SPEAKER GROUP, PAN GROUP, PARAMETRIC EQUALIZER, PITCH SHIFTER GROUP, EXCITER GROUP, ENSEMBLE GROUP, PHASER GROUP, 3 BAND EQUALIZER, SPEAKER SIMULATION GROUP, PEDAL PAN, GATE,PEDAL WAH, EARLY REFLECTION, HARD DISTORTION GROUP, AUTO WAH GROUP, SPACE PHASER GROUP, MULTI TAP DELAY GROUP, LONG DELAY GROUP,TEMPO DELAY, DYNAMIC MODULATION GROUP, 4CH MIXER, GATE II GROUP, LIMITTER, BAND CHORUS GROUP, STEREO EXCITER, COMP/LIMITTER, SUPER DISTORTION GROUP, HARD DISTORTION II GROUP, NEW 3 BAND EQUALIZER, MULTI - TAP CHORUS, REVERB II GROUP,DRIVER, ROTARY SPEAKER II, MODULATION II GROUP, STEREO COMP/LIMITTER LEFT, STEREO COMP/LIMITTER RIGHT,STEREO PITCH SHIFTER/DELAY GROUP, SPECIAL REVERB GROUP,  
Power consumption: 26 W
- Dimensions: 482(W)  $\times$  332.5(D)  $\times$  44(H)mm (19"  $\times$  12 - 15/16"  $\times$  1 - 3/4")
- Weight : 4.5 kg (albs 14 1/2oz)
- Optional accessories: VOLUME PEDAL(KVP - 001), FOOT SWITCH(PS - 1,PS - 2), REMOTE CABLE(RCC - 050,RCC - 100), FOOT CONTROLLER(FC6), RAM CARD(MCR - 03 only), ROM CARD(SPC - 01 -)

★ Specifications are subject to change without notice


# 2. STRUCTURAL DIAGRAM

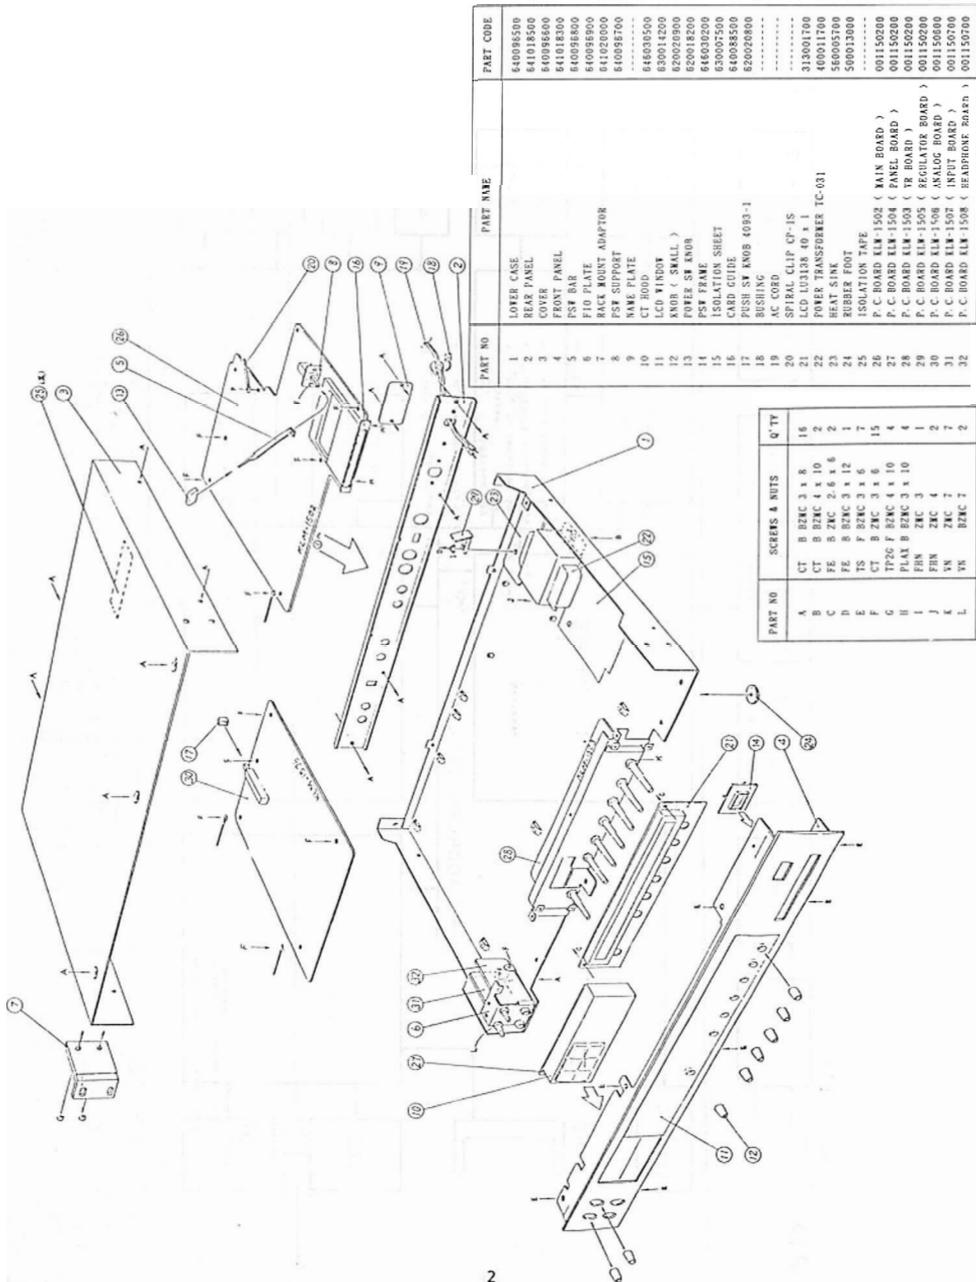

PART NO	PART NAME	PART CODE
1	LOWER CASE	640098500
2	REAR PANEL	641018500
3	FRONT PANEL	600986000
4	PSF BAR	641038500
5	F10 PLATE	641038500
6	PSF SUPPORT	640098500
7	RACK MOUNT ADAPTOR	641020000
8	NAME PLATE	640098700
9	CT HOOD	644036500
10	LCD WINDOW	830014200
11	ANDE ( SMALL )	820029900
12	ANDE ( LARGE )	820018200
13	PSF FRAME	830002500
14	ISOLATION SHEET	830002500
15	CARD GUIDE	640098500
16	PUSH SW KNOB 4083-1	620022800
17	BUSHING	-----
18	AC CORD	-----
19	SPIRAL CLIP CP-18	3130001700
20	LCD 101308 10 X 11	-----
21	TRANSFORMER TC-001	4600017000
22	HEATSINK	2600057000
23	REBBER FOOT	-----
24	ISOLATION TAPE	-----
25	P. C BOARD KLM-1502 ( MAIN BOARD )	001150200
26	P. C BOARD KLM-1504 ( PANEL BOARD )	001150200
27	P. C BOARD KLM-1503 ( TR BOARD )	001150200
28	P. C BOARD KLM-1505 ( REGULATOR BOARD )	001150200
29	P. C BOARD KLM-1506 ( ANALOG BOARD )	001150200
30	P. C BOARD KLM-1507 ( INPUT BOARD )	001150700
31	P. C BOARD KLM-1508 ( HEADPHONE BOARD )	001150700
32	P. C BOARD KLM-1508 ( HEADPHONE BOARD )	001150700


PART NO	SCREWS & NUTS	QTY
A	CT B BZAC 3 X 8	16
B	CT B BZAC 4 X 10	8
C	FE B ZMC 2.5 X 6	2
D	FE B BZAC 3 X 12	1
E	TS B ZMC 3 X 6	7
F	CT B ZMC 3 X 6	15
G	TP26 F BZAC 4 X 10	4
H	PLAK B BZAC 3 X 10	4
I	FIN ZMC 3	1
J	FIN ZMC 4	2
K	FIN ZMC 5	2
L	YN BZAC 7	2

### 3. BLOCK DIAGRAM

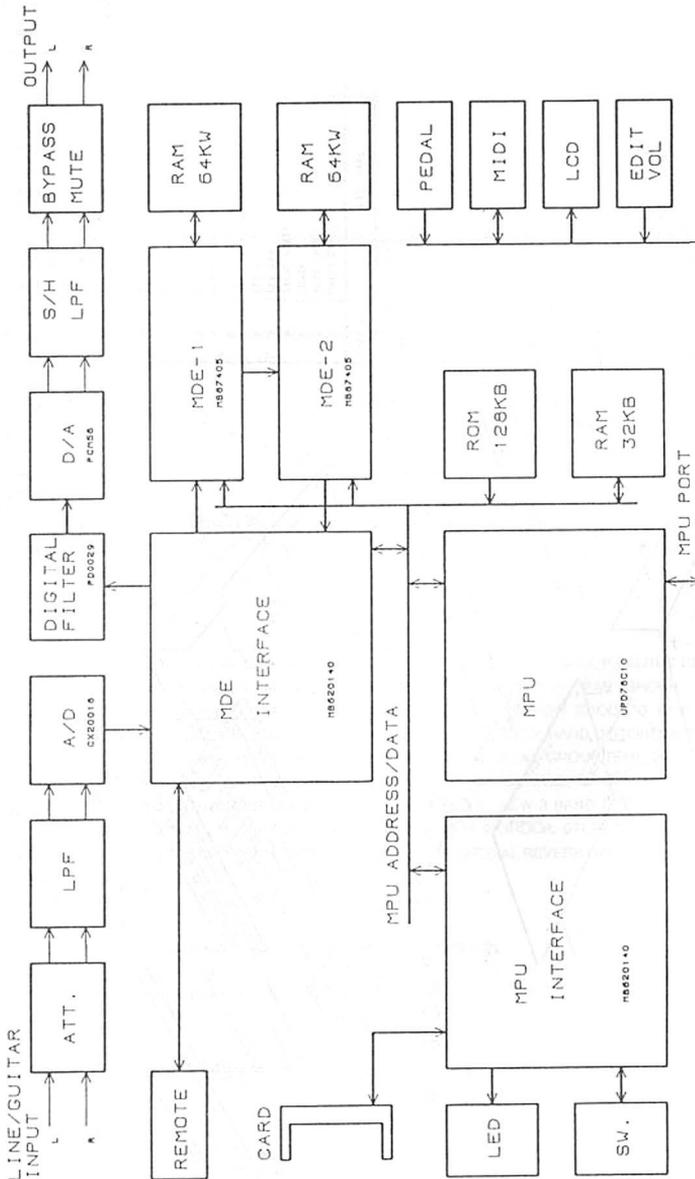

# 4. CIRCUIT DIAGRAM

KLM-1502-05

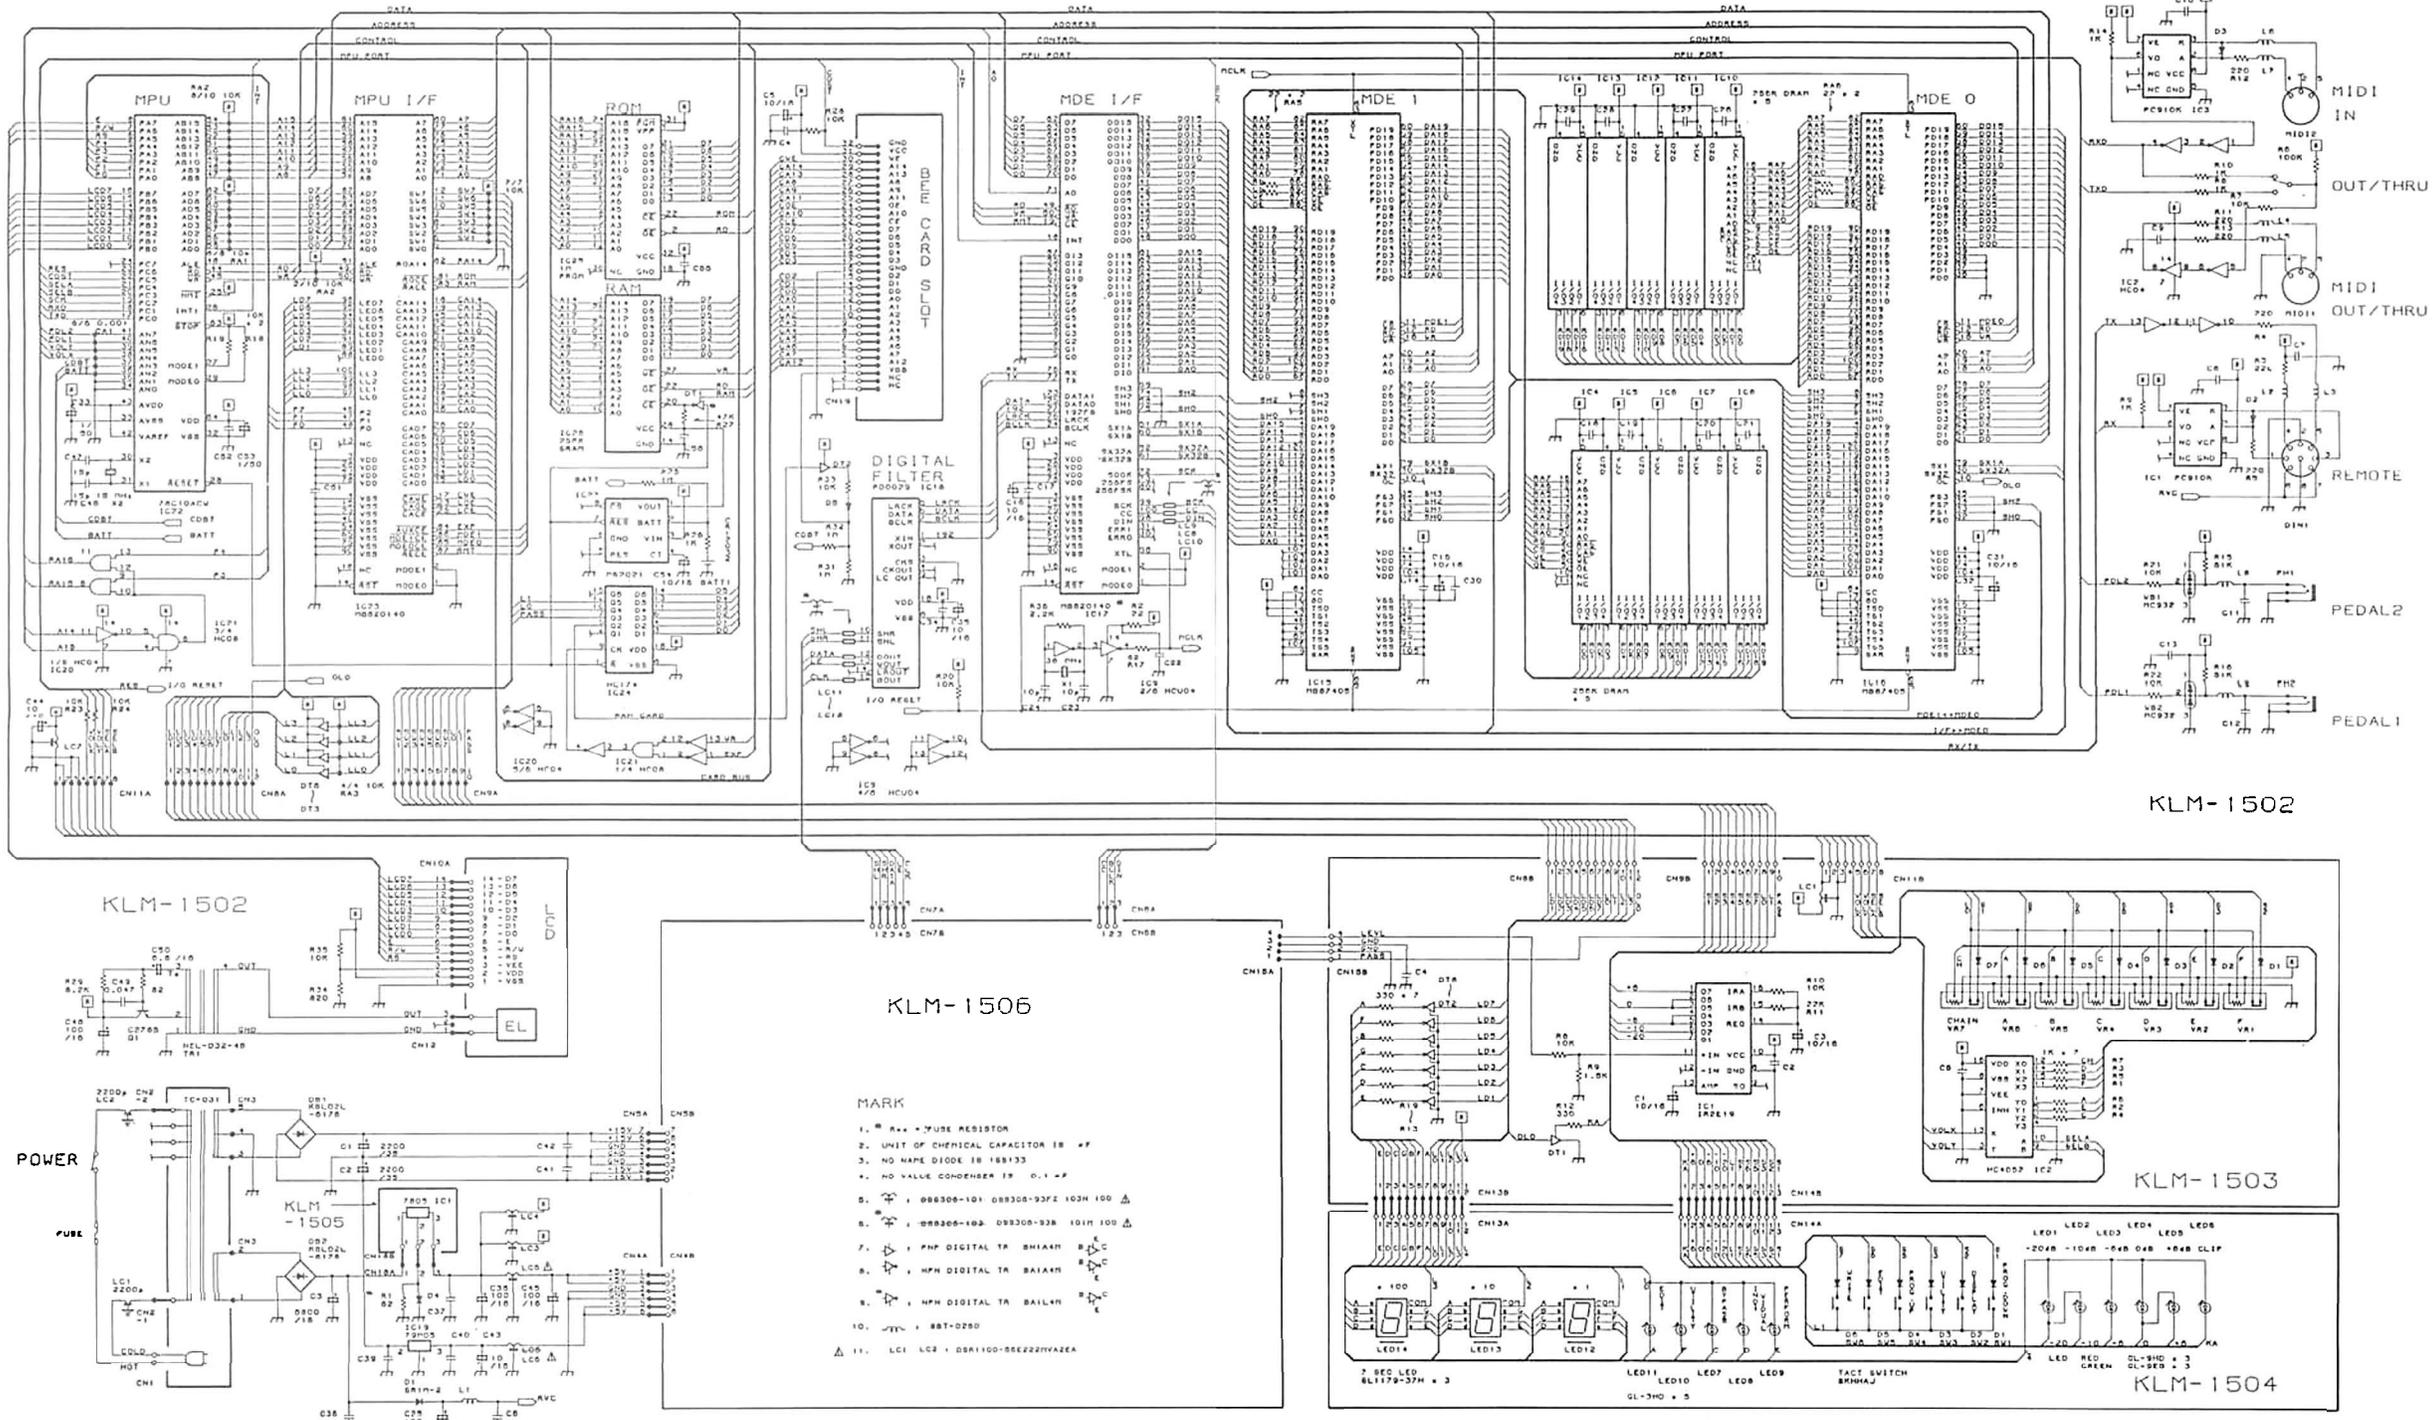

KLM-1502

KLM-1502

KLM-1506

KLM-1503


KLM-1504

- MARK
1. \* R = .YUSE RESISTOR
  2. UNIT OF CHEMICAL CAPACITOR IS \*F
  3. NO NAME DIODE IS 1N5133
  4. NO VALUE CONDENSER IS .0.1 \*F
  5. \* 888308-101 088308-93F2 103H 100 Δ
  6. \* 888308-102 088308-93B 101H 100 Δ
  7. \* PNP DIGITAL TR B1AHAN B/C
  8. \* NPN DIGITAL TR B1AHAN B/C
  9. \* NPN DIGITAL TR B1AHAN B/C
  10. \* 88T-0280
  - Δ 1. LCI LCR \* 081100-866222HVA2A



MARK

- 1. NO NAME DIODE IS 15B133
- 2. NO VALUE CONDENSER IS 0.1 μF
- 3. UNIT OF CHEMICAL CONDENSER IS μF
- 4. : 055-305 103
- 5. : NPN DIGITAL TR
- 6. : EL02AN2-R52

KLM-1502


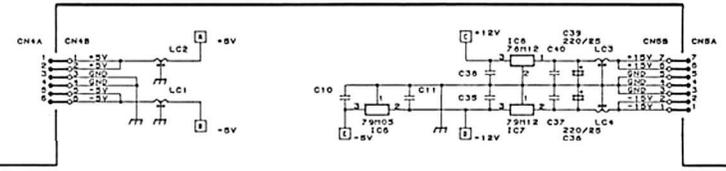


GUITAR IN

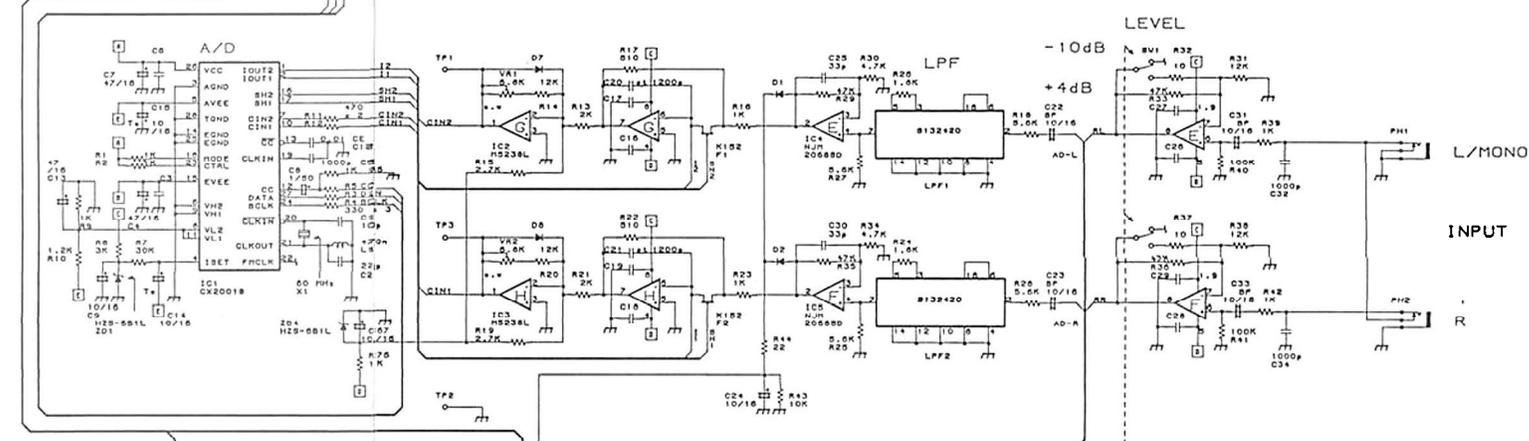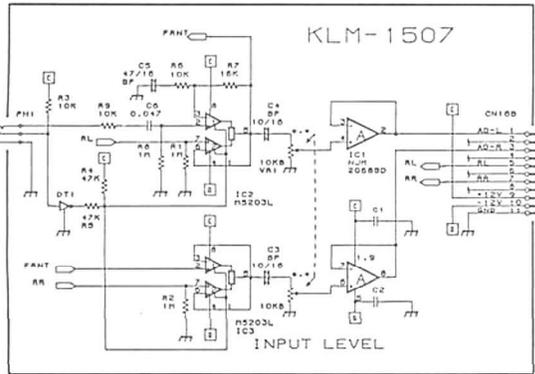

L/MONO INPUT R

PHONES

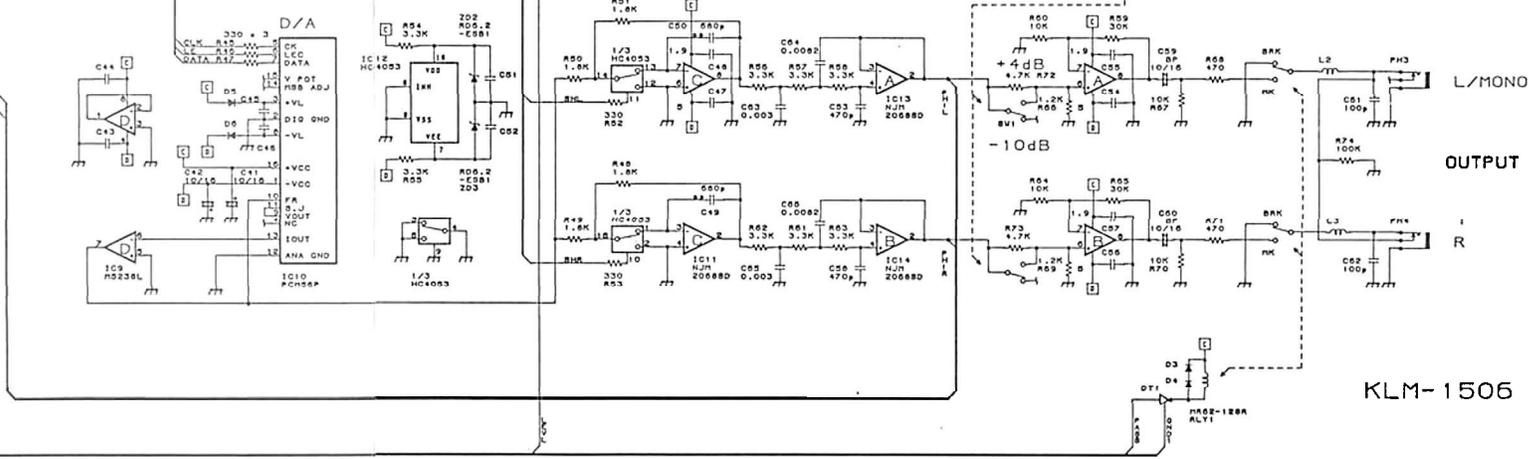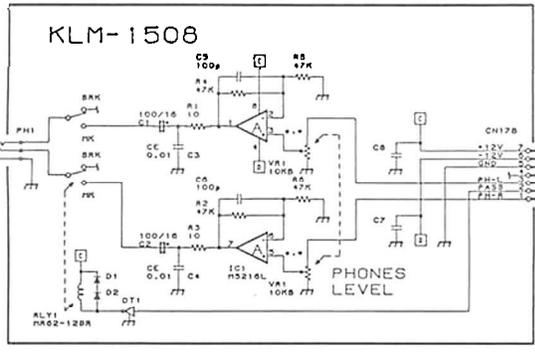


L/MONO OUTPUT R

KLM-1503


KLM-1506


## 5. P.C. BOARDS

KLM-1506B

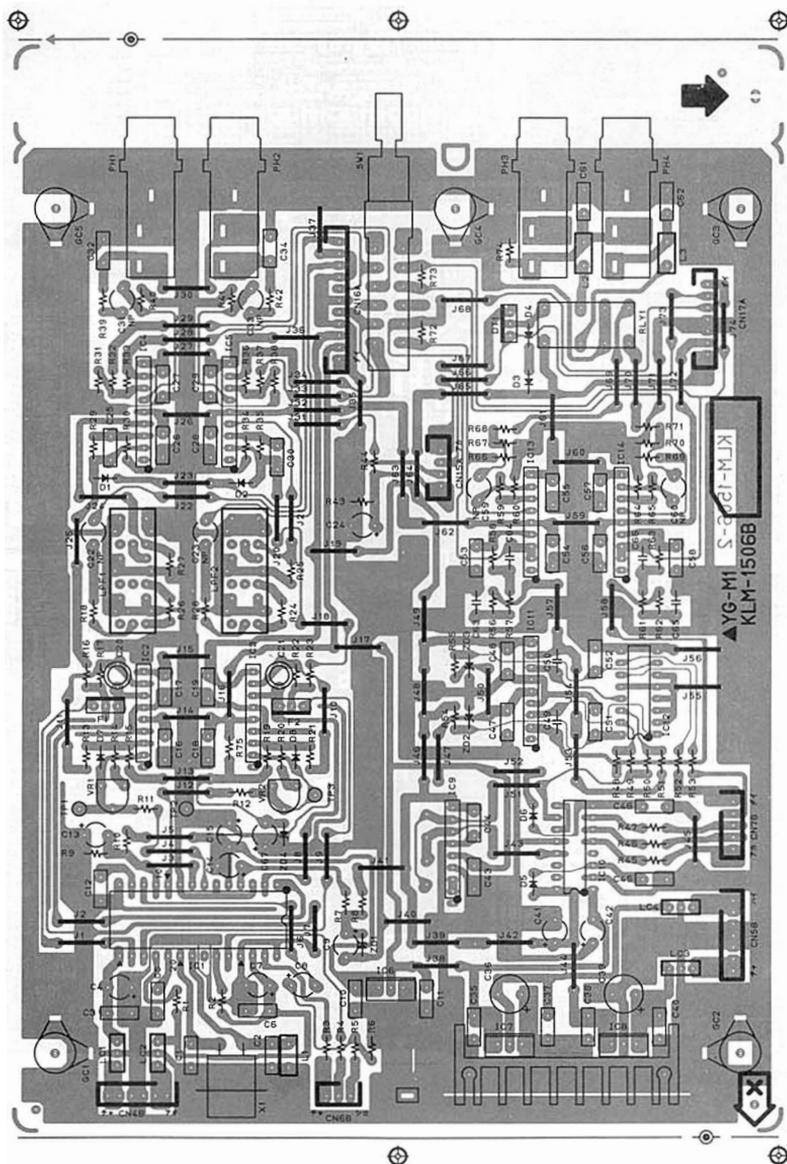


KLM-1502-05

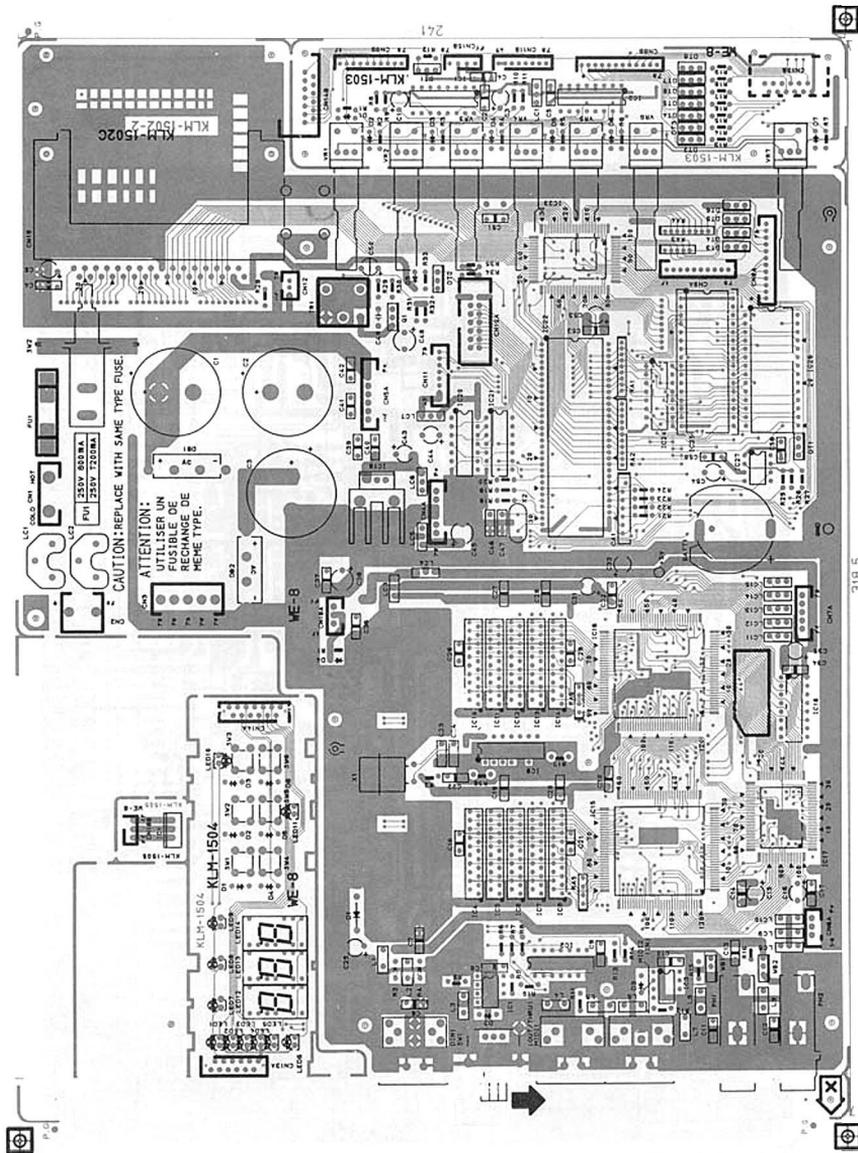


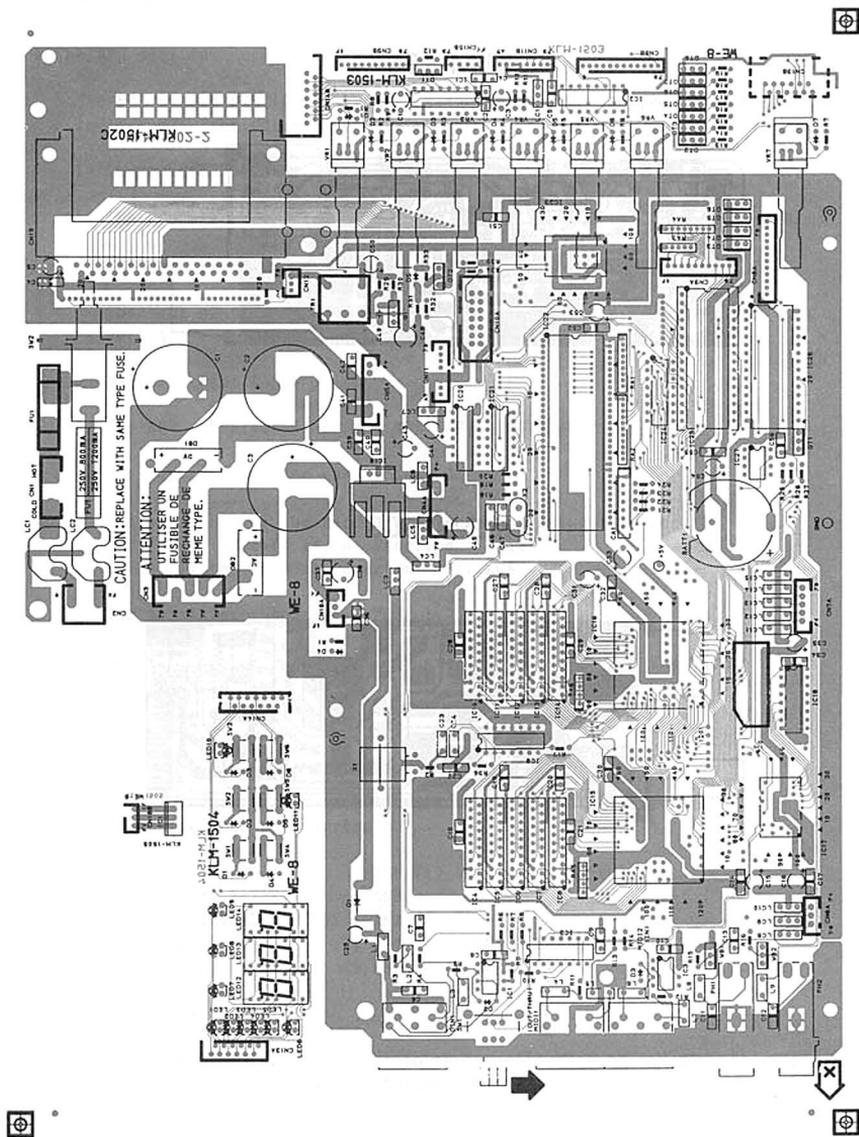

## KLM-1507

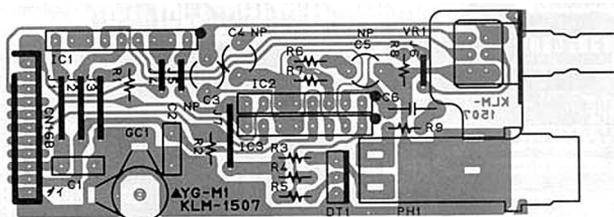

## KLM-1508

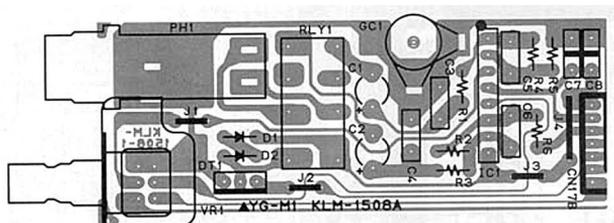

## 6. CIRCUIT EXPLANATION

### 1. The MPU section

The MPU uses UPD78C10 and processes the following. The port of the MPU are indicated in the parentheses.

1) The control of the LCD unit ( PA5-7, PB0-7 )

The LCD are controlled by using a part of the Port A and the Port B.

2) The bank change of the memory area ( PA3, 4 )

The bank of the memory and the I/O is changed by using a part of the Port A.

3) The I/O reset ( PC6 )

The MDE ( MB87405 ) and the MDE I/F ( MB620140 ) are reset.

4) The detection of the card ( CDST )

The existence of the card are detected by using this port

If the card is not inserted : HIGH

If the card is inserted : LOW

5) The multiplexer control ( PC3, 4 )

The multiplexer HC4052 ( IC2 ) are controlled in the KLM-1503.

6) MIDI I/O ( PC0, 1 )

7) A/D

The A/D convertor in the MPU are used and the A/D conversion of the following data are carried out.

PEDAL/SW 1-2 ( AN6, 7 )

CARD BATTERY ( AN3 )

INTERNAL BATTERY ( AN2 )

EDIT VR ( AN4 ).....CHAIN/EFFECT. B, D, F VR

( AN5 ).....A, C, E VR

### 2. The MPU I/F section

The MPU I/F MB620140 is the LSI to be the interface of the MPU and each I/O and the main functions are as follows.

1) Address Latch ( AD0-7 )

This IC latches the lower 8 bit of the address bus of the MPU with the timing of the ALE terminal.

2) LED Control ( LLO-3, LED1-7 )

This IC receives the data from the MPU and puts the LED on.

3) Bank Change Input ( P0-2 )

This IC receives the bank change signal and controls the ROA 14 and each CE output.

4) SW Data Input ( SW1-7 )

This IC is the input port to transmit the SW data to the MPU.

5) Address Output ( A0-7 )

This IC transmits the latched time-division address bus.

6) CARD I/O ( CAA, CAD )

The address bus for the card and the data bus for the card.

7) CE Output

Each memory, the CE output terminal for the I/O.

3. The MDE I/F section

The MDE I/F MB620140 is the LSI to be the interface between the A/D convertor and the D/A convertor. This also transmits and receives the remote signal for the FC6.

1) The interface with the A/D convertor ( BCK, CC, DIN )

This IC converts the serial data of CX-20018 into the parallel data and transmits to the MDE0. The CC terminal transmits 37.1 KHz and the BCK transmits 1.188 MHz.

2) The interface with the D/A convertor ( DATA0, 192FS, LRCK, BCLK )

This IC converts the parallel data from the MDE to the serial data and transmits to the digital filter PD0028.

3) The remote I/O ( RX, TX )

When the data is received from the I/O terminal for the FC6, this IC transmits the interruption signal to the MPU.

# 7. CHECK AND ADJUSTMENT

Before you start the diagnostic test

If necessary data are memorized in the A2, please save the data into the RAM card before starting the test.

Starting the diagnostic test

Connect the MIDI cable to the MIDI IN and OUT of the rear panel.  
Insert a RAM card ( MCR-03 ) into the card slot.  
When the power is turned on while " CHAIN/EFFECT " and " C " are being pressed, this diagnostic test ( Self Test Program ) starts.

The explanation of the operation switches on the diagnostic test

- " WRITE " switch : The check proceeds to the next.
- " ▲ " switch : The item proceeds to the next.
- " ▼ " switch : The item returns to the previous one.
- BYPASS " switch : The diagnostic test mode returns to the normal mode.

Regarding the " PARAMETER INITIALIZE "

When the diagnostic test starts normally, the screen of the " PARAMETER INITIALIZE " is indicated.

PARAMETER INITIALIZE ? YES / NO

Press " YES " ( E ) if you would like to initialize the internal data of the A2 or press " NO " ( F ) if you don't want to do that.

## 1. INTERNAL CHECK

When the PARAMETER INITIALIZE is finished, the item proceeds to the INTERNAL CHECK automatically.

### 1) MIDI circuit check

The MIDI IN-OUT is checked.

When this check passes, the item proceeds to the next automatically.

When this check fails, all the LEDs go on and off and the letter " Err " is indicated in the LED display.

Then the following is indicated in the LCD.

< MIDI > OUT--x-->IN

## 2) Remote circuit check

The remote terminal circuit is checked.

When this check passes, the item proceeds to the next automatically.

When this check fails, all the LEDs go on and off and the letter " Err " is indicated in the LED display.

Then the following is indicated in the LCD.

```
⟨ REMOTE ⟩ OUT--X--→IN
```

- ※ You need a short plug ( DIN plug whose 1 pin and 4 pin, 3 pin and 5 pin are short-circuits ). If the short plug is not available, press the " WRITE " SW and proceed to the next check.

## 3) Card battery check

The battery of the RAM card into the card slot is checked.

When this check passes, the item proceeds to the next automatically.

When this check fails, all the LEDs go on and off and the letter " Err " is indicated in the LED display.

Then, when no RAM card is inserted into the card slot or a ROM card is inserted into it, the following is indicated in the LCD.

```
⟨ CARD ⟩ WRITE / READ xx
```

When the battery voltage of the RAM card is low, the following is indicated in the LCD.

```
⟨ CARD ⟩ CARD Battery Low xx
```

## 4) Internal battery check

The battery voltage of the A2 is checked.

When this check passes, the item proceeds to the next automatically.

When this check fails, all the LEDs go on and off and the letter " Err " is indicated in the LED display.

Then the following is indicated in the LCD.

```
⟨ INT BATT ⟩ Internal Battery Low xx
```

## 2. A/D LEVEL CONFIRMATION AND ADJUSTMENT

When the INTERNAL CHECK is finished, the item proceeds to the A/D LEVEL CONFIRMATION AND ADJUSTMENT automatically.

### 1) L ch A/D level confirmation and adjustment

< A/D LEVEL > Lch Checking ..


- (1) Input the sin wave of 1Vp-p 400Hz to the LINE IN L/MONO terminal of the rear panel.
- (2) Connect an oscilloscope to the OUTPUT L/MONO terminal of the rear panel and adjust the output waveform to 40mVp-p with the master VR of the front panel.
- (3) Confirm the output waveform transforms the normal sin wave.  
If it is not so, adjust with the VR1 of KLM-150G.

When this check is finished, press the "WRITE" SW to proceed to the next check.


### 2) R ch A/D level confirmation and adjustment

< A/D LEVEL > Rch Checking ..

- (1) Connect an oscilloscope to the OUTPUT R terminal of the rear panel and adjust the output waveform to 40mVp-p with the master VR of the front panel.
- (2) Confirm the output waveform transforms the normal sin wave.  
If it is not so, adjust with the VR2 of KLM-150G.

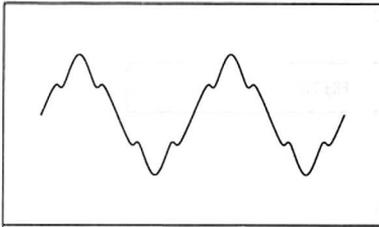

NG

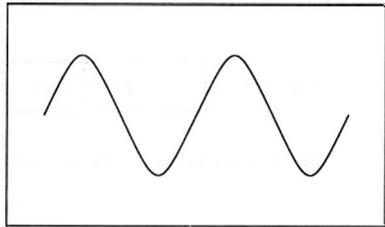

GOOD

※ If this adjustment is not its proper position, the noise will be much bigger.

### 3. LED, LCD, SW, D.F.E., AND PEDAL CHECKS

#### 1) LED check

The LEDs of the front panel light automatically on this check

( LED ) Checking ..

The turn to light is as follows.

"UTILITY" → "PRAM EDIT" → "PERFORM" → "INDIVID" → "BYPASS" → 7 SEGMENT LED

Confirm all the LEDs light.

When all the LEDs go out, the item proceeds to the next check automatically.

#### 2) LCD check

When the "WRITE" SW is pressed once, all the dots of the LCD are indicated.

Confirm this.

( LCD )

↓



When this check is finished, press the "WRITE" SW to proceed to the next check.

#### 3) Panel SW check

Press the switch indicated in the LCD to check it

(eg.)

( PANEL SW ) Push [ WRITE ]

The turn to press is as follows.

"WRITE" → "PARAM EDIT" → "▲" → "UTILITY" → "DISPLAY SELECT" → "▼"

When this check is finished, the item proceeds to the next check automatically.

#### 4) D.F.E. check

When the D.F.E. which is indicated in the LCD is pressed once, the name of the D.F.E. which is being pressed and the A/D value are indicated in the LCD.

Also, confirm the A/D value changes between 0 and 255 when this D.F.E. is turned.

(eg.)

< D.F.E. > Push [ A ] BYPASS 252
----------------------------------

                  ↑          ↑          ↑  
                  next SW  push SW  A/D

When this check is finished, press the "WRITE" SW to proceed to the next check.

#### 5) Pedal check

Connect the volume pedal KVP-001 to the PEDAL/SW 1 and 2 terminal of the rear panel. Set the slide VR of the KVP-001 to be 0.

##### (1) Pedal 1 check

Confirm the A/D value changes between 0 and 255, the MIDI data changes between 0 and 127 when the KVP-001 is operated at the condition that the letter "PEDAL 1" is indicated in the LCD.

(e.g.)

< PEDAL > PEDAL 1 : 208 127
-----------------------------

                                  ↑          ↑  
                                  A/D      MIDI DATA

When this check is finished, press the "WRITE" SW to proceed to the next check.

##### (2) Pedal 2 check

Check as well as (1)

When this check is finished, press the "WRITE" SW to proceed to the next check.

#### 4. MDE CHECK

Connect an oscilloscope to the OUTPUT L/MONO terminal of the rear panel.

##### 1) MDE 1 ( IC15 ) check

( MDE ) MDE1 Checking ..

The waveform which is oscillated only from the MDE 1 ( IC15 ) internally is transmitted.

Confirm that the following waveform can be monitored on the oscilloscope.

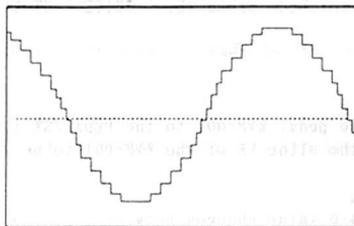


Fig. 1 MDE Test Waveform

When this check is finished, press the "WRITE" SW to proceed to the next check.

##### 2) MDE 2 ( IC16 ) check

( MDE ) MDE0 Checking ..

Check as well as 2)





When this check is finished, press the D.F.E. "BYPASS" SW to return to the normal mode.

※ Regarding the check item of the diagnostic test




We don't mention anything about the checks after the MDE check because they are for the inspection at the factory and because an audio analyzer etc. are needed.

# 8. IC CHECK POINT

## UPD78C10CW (MPU)

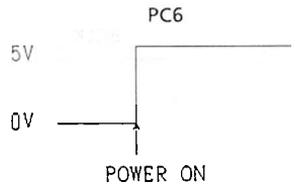
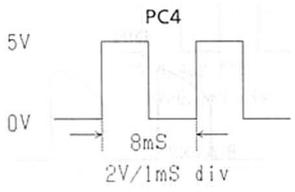
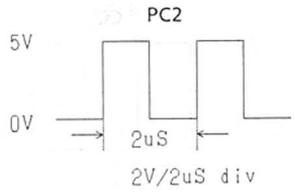
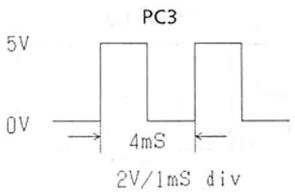


## PD0029 (D. FILTER)

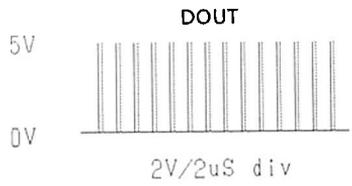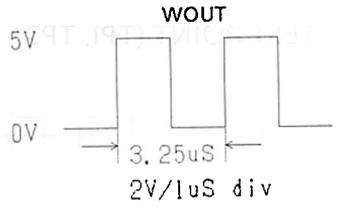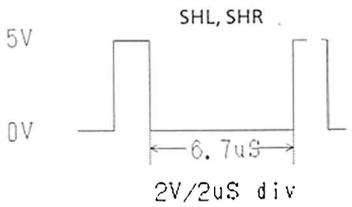


When a sound is received, the pulse changes.

## CX20018 (ADC)

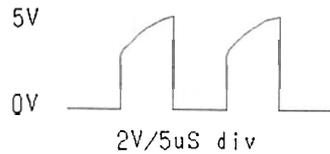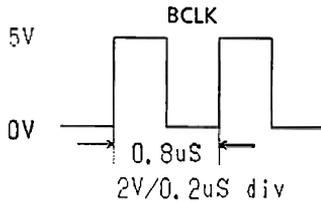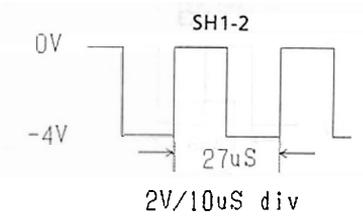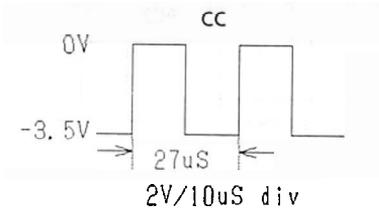

When a sound is received,  
the pulse changes.








## TEST POINT (TPI. TP2)

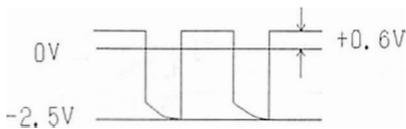

When the level of this waveform has the large difference,  
the noise is generated.

In this case, please adjust with the VR 1 and 2.

# MB620140 (MDE I/F)

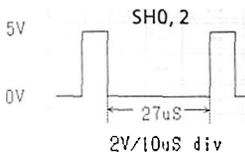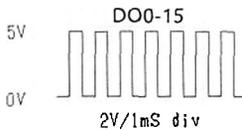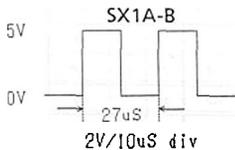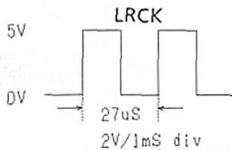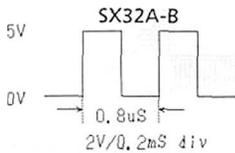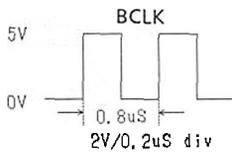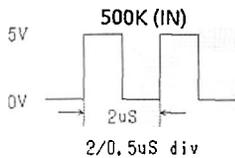


When the internal noise gate works,  
the data is fixed.

# 9. REFERENCE DATA

## MB620140 (CPU-INTERFACE)

### PIN ASSIGNMENT

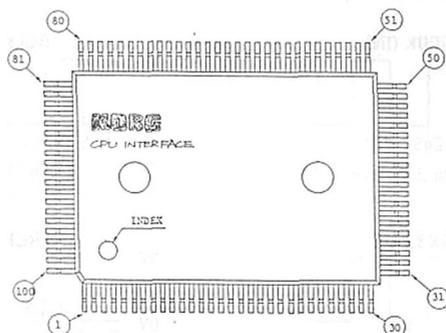


## MB620140 (CPU-INTERFACE)

### PIN FUNCTION

NO.	I/O	PIN NAME									
1	I	MODE0	26	I/O	CA07	51	I	ALE	76	O	A5
2	I	MODE1	27	I/O	CA06	52	I	A8	77	O	A6
3	-	VDD	28	-	VDD	53	-	VDD	78	-	VDD
4	-	VSS	29	-	VSS	54	-	VSS	79	-	VSS
5	I	SW0	30	I/O	CA05	55	I	A9	80	O	A7
6	I	SW1	31	I/O	CA04	56	I	A10	81	O	ROCE
7	I	SW2	32	I/O	CA03	57	I	A11	82	O	ROA14
8	I	SW3	33	I/O	CA02	58	I	A12	83	O	ROCE
9	I	SW4	34	I/O	CA01	59	I	A13	84	O	AUXCE
10	I	SW5	35	I/O	CA00	60	I	A14	85	O	ROBCE
11	I	SW6	36	O	CA00	61	I	A15	86	O	RODICE
12	I	SW7	37	O	CA01	62	I/O	A07	87	O	RECE
13	-	NC	38	O	CA02	63	I/O	A06	88	O	LEDB
14	I	RST	39	O	CA03	64	I/O	A05	89	O	LED1
15	-	VSS	40	-	VSS	65	-	VSS	90	-	VSS
16	-	NC	41	O	CA04	66	I/O	A04	91	O	LED2
17	O	CA05	42	O	CA05	67	I/O	A03	92	O	LED3
18	O	CA014	43	O	CA06	68	I/O	A02	93	O	LED4
19	O	CA013	44	O	CA07	69	I/O	A01	94	O	LEDB
20	O	CA08	45	O	CA02	70	I/O	A00	95	O	LED6
21	O	CA09	46	I	P2	71	O	A0	96	O	LED7
22	O	CA011	47	I	P1	72	O	A1	97	O	LL0
23	O	CA0E	48	I	P0	73	O	A2	98	O	LL1
24	O	CA010	49	I	RD	74	O	A3	99	O	LL2
25	O	CA0E	50	I	WR	75	O	A4	100	O	LL3

## MB620140 (MDE INTERFACE)

### PIN ASSIGNMENT

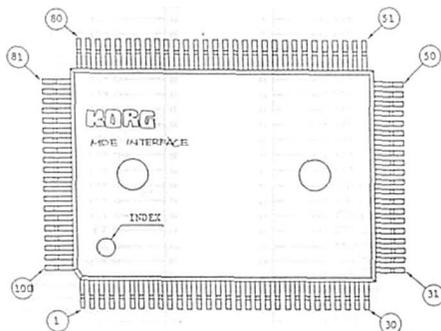


## MB620140 (MDE INTERFACE)

### PIN FUNCTION

NO.	I/O	PIN NAME									
1	I	MODE0	26	O	LACK	51	I	SK1A	76	I	RK
2	I	MODE1	27	O	192FS	52	I	SK32H	77	O	TK
3	-	UDD	28	-	UDD	53	-	UDD	78	-	UDD
4	-	USS	29	-	USS	54	-	USS	79	-	USS
5	I	Q0	30	O	ERR0	55	I	G12	80	O	256FSX
6	I	Q1	31	O	ERR1	56	I	XTL	81	I	D115
7	I	Q2	32	O	D015	57	I	G13	82	I	D114
8	I	Q3	33	O	D014	58	I	SH1	83	I	D113
9	I	Q4	34	O	D013	59	I	SH3	84	I	D112
10	I	Q5	35	O	D012	60	I	SK1B	85	I	D111
11	I	Q6	36	O	D011	61	I	SK32B	86	I	D110
12	I	Q7	37	O	D010	62	I/O	D7	87	I	D19
13	-	NC	38	O	D09	63	I/O	D6	88	I	D18
14	I	RST	39	O	D08	64	I/O	D5	89	I	D17
15	-	USS	40	-	USS	65	-	USS	90	-	USS
16	-	NC	41	O	D07	66	I/O	D4	91	I	D16
17	I	Q8	42	O	D06	67	I/O	D3	92	I	D15
18	O	INT	43	O	D05	68	I/O	D2	93	I	D11
19	I	CE	44	O	D04	69	I/O	D1	94	I	D15
20	I	G9	45	O	D03	70	I/O	D0	95	I	D12
21	I	G10	46	O	D02	71	I	D0	96	I	D14
22	I	G11	47	O	D01	72	O	500F	97	I	D13
23	O	DATA1	48	O	D00	73	O	256FS	98	I	D1H
24	O	BCLK	49	I	RD	74	I	SH2	99	O	BCK
25	O	DATA0	50	I	WR	75	I	SH0	100	O	CC

## MPU (UPD78C10ACW)

### PIN ASSIGNMENT

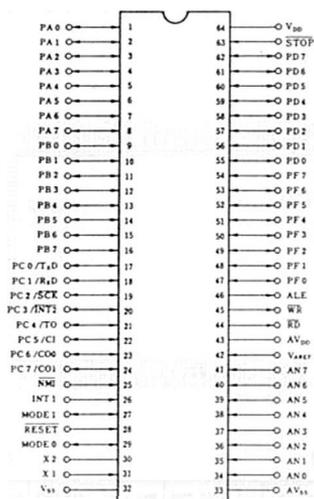


## MPU (UPD78C10ACW)

### PIN FUNCTION


PIN NAME	I/O	FUNCTION
PA7-0	I/O	Port A
PB7-0	I/O	Port B
PC0	O	Transmit Data
PC1	I	Receive Data
PC2	O	Serial Clock
PC3	I	Interrupt Request
PC4	O	Timer Output
PC5	I	Counter Input
PC6, 7	O	Counter Outout 0.1
AD7-0	I/O	Address/Data Bus
AB15-8	O	Address Bus
WR	O	Write Strobe
RD	O	Read Strobe
ALE	O	Address Latch Enable
MODE0, 1	I/O	Mode

PIN NAME	I/O	FUNCTION
NMI	I	Non-Maskable Interrupt
INT1	I	Interrupt Request
AN7-0	I	Analog Input
VAREF	-	Reference Voltage
AVDD	-	Analog VDD
AVSS	-	Analog VSS
X1, X2	-	Crystal
RESET	I	Reset
STOP	I	Stop
VDD	-	VDD
VSS	-	VSS


# FOR HARNESSSES

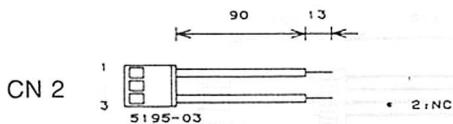


HNS-1556

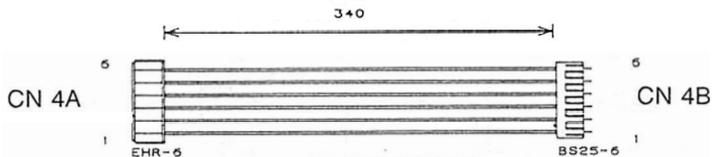


HNS-1557

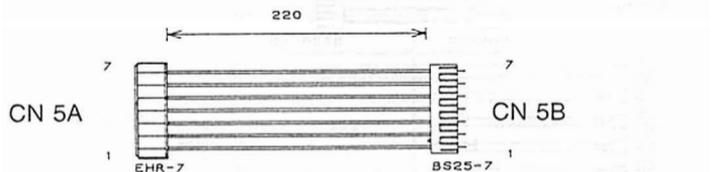





HNS-1558

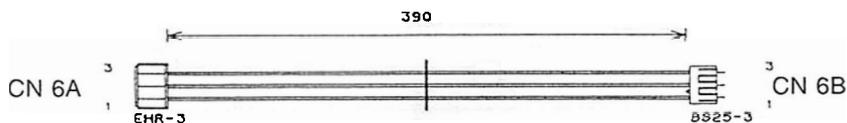


HNS-1559

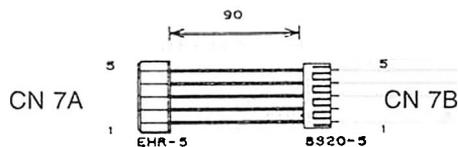


HNS-1560

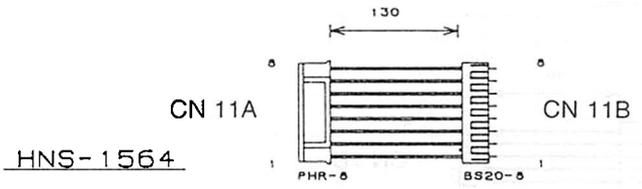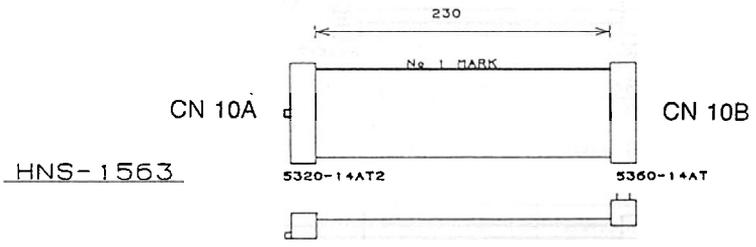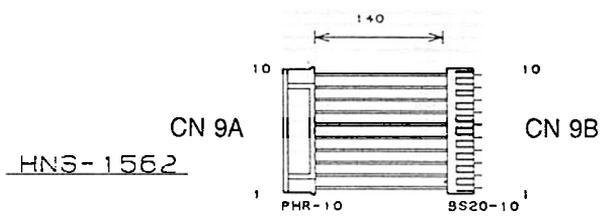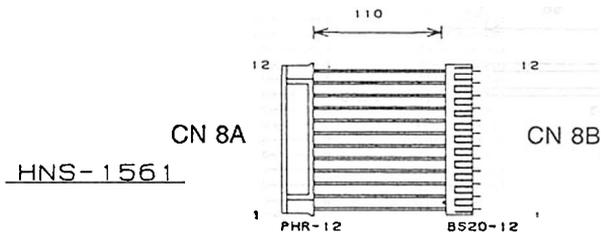


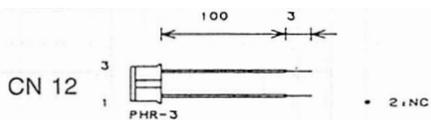


HNS-1565

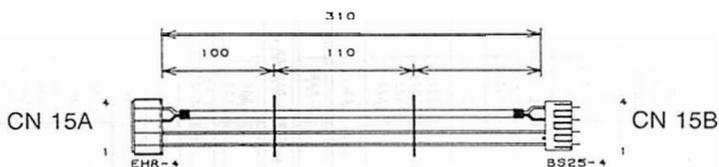


HNS-1566

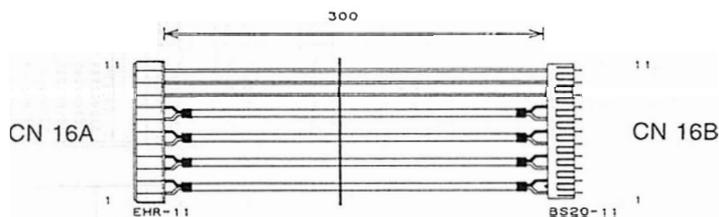

HNS-1567

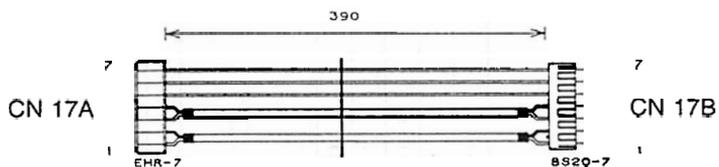

HNS-1568

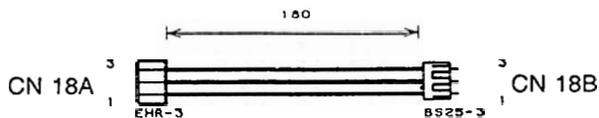

HNS-1569

## 10. PARTS LIST

PARTS CODE	PARTS NAME SPECIFICATIONS	P. C. BOARD	IDENTIFICATION NO. FUNCTION	Q'TY
<b>P. C. BOARD ASSEMBLE</b>				
001150200	KLW-1502-05	1502-5		1
001150600	KLW-1506	1506		1
001150700	KLW-1507/08	1507/8		1
<b>BLOCK RESISTORS</b>				
139010001	RGLD2Y220J 220HM	1502-5		2
139010002	RGLE10x103J 10K	1502-5		1
139010003	RGLE4x103J 10K	1502-5		1
139010004	RGLE7x103J 10K	1502-5		1
139010005	RGLE8x103J 10K	1502-5		1
<b>LC FILTER</b>				
219051300	S132420	1506		2
<b>AC LINE FILTER</b>				
219051500	DSR1100-56E222MVA2	1502-5		2
<b>EMI FILTERS</b>				
219401000	DSS306-93F2103N100	1502-5		6
		1506		4
219401100	DSS306-93B101M100	1502-5		8
<b>BLOCK CAPACITOR</b>				
248025410	50V 100PF x 6	1502-5		1
<b>PPCs</b>				
260002547	100V 0.047UF	1507-8		1
260003368	100V 680PF	1506		2
<b>TRANSISTORS</b>				
304020070	ZSC2785	1502-5		1
304020100	BA1A4M-T	1502-5		7
		1506		1
		1507/8		1
304020110	BN1A4M-T	1502-5		6
304020220	BA1L4M-T	1502-5		1

PARTS CODE	PARTS NAME SPECIFICATIONS	P. C. BOARD	IDENTIFICATION NO. FUNCTION	Q'TY
<b>FET</b>				
306000600	ZSK-152-3	1506		2
<b>DIODES</b>				
310002100	SR1W-2	1502-5		1
314001300	1SS-133	1502-5		17
		1506		8
<b>BRIDGE DIODE</b>				
310011000	KBL02L-6176	1502-5		2
<b>LEDs</b>				
312007800	GL3HD8	1502-5		5
312008200	SL-1179-37H (RED)	1502-5		3
312008700	GL-9HD22	1502-5		3
312008800	GL-9EC22	1502-5		3
<b>LCD</b>				
313001700	LU3138 40 x 1	N. PART		1
<b>ZENER DIODES</b>				
314024300	HZS-6B1L-TD	1506		2
314024400	RD6.2ESB1-T1	1506		2
<b>DOUBLE DIODE</b>				
315000400	MC932-T12	1502-5		2
<b>ICs</b>				
320001068	UPD74HC04C	1502-5		1
320001095	UPD74HC174C	1502-5		1
320001097	UPD74HC04C	1502-5		2
320001101	UPD74HC08C	1502-5		1
320001128	UPD43256C-15L	1502-5	SRAM	1
320001151	UPD74HC4053	1506		1
320001193	UPD78C10ACV	1502-5	CPU	1
320001269	UPD74HC4052C	1502-5		
320009057	NJM7805FA	1502-5		

PARTS CODE	PARTS NAME SPECIFICATIONS	P. C. BOARD	IDENTIFICATION NO. FUNCTION	Q' TY
320009078	NJW78M12FA	1506		1
320009079	NJW79M12FA	1506		1
320009080	NJW79M05FA	1502-5		1
		1506		1
320009085	NJW2068SD	1506		5
		1507/8		1
320010003	CU20018	1506	A/D CONVERTER	1
320011026	K5216L	1507/8		1
320011076	K5238L	1506		1
320011113	K5M4464AL-10	1502-5	DRAM	10
320011128	K62021P	1502-5	RESET	1
320011129	K5203L	1507/8		2
320012052	M87405PF	1502-5	MDE	2
320012064	M650140PF	1502-5	CPU(Or KDE) I/F	2
320012081	M6M7C1000-20Z-G	1502-5	ROM	1
320013034	1R2E19	1502-5	LED DRIVER	1
320016001	P90029	1502-5	DIGITAL FILTER	1
320036004	PCM36P	1506	D/A CONVERTER	1
PHOTO COUPLER				
330001140	PC-910F	1502-5		2
COIL				
334000200	YF47MA 0.47UH	1506		1
SB COIL				
334000500	SBT-0260TF	1502-5		9
CRYSTAL OSCILLATORS				
335005700	HC-49/U 60KHZ	1506		1
335005800	AT-49 15KHZ	1502-5		1
335005900	HC-49/U 38KHZ	1502-5		1
SEMI FIXED VR				
350002288	RH0615C 6.8K	1506		2
FUSES				
382005300	10KB x 2	1507/8		2
382005400	10KB	1502-5		7

PARTS CODE	PARTS NAME SPECIFICATIONS	P. C. BOARD	IDENTIFICATION NO. FUNCTION	Q' TY
SLIDE SW				
3734005300	SLS-25-2022-1	1502-5		1
POWER SW				
375007800	ESB-8213V	1502-5		1
TACT SW				
375008500	SRHHAJ	1502-5		6
PUSH SW				
375010200	SPUL1265A	1506		1
POWER TRANSFORMER				
400011700	TC-031	M. PRT		1
FERRITE BEADS				
402002300	BL028N2-R62	1507/8		2
		1506		2
402002400	NEL-D32-46	1502-5		1
RELAY				
403001500	M862-128R	1506		1
DIN JACKS				
454005400	YF51-5008	1502-5		2
454006700	YF51-5014A	1502-5		1
PHONE JACKS				
454007900	YR821-5176	1506		4
454008000	YR821-5138	1502-5		2
		1507/8		2
FUSES				
464011901	250V 0.8A UL	M. PRT	11TCN 117US	1 1

PARTS CODE	PARTS NAME SPECIFICATIONS	P. C. BOARD	IDENTIFICATION NO. FUNCTION	Q' TY
464011901	250V 0.8A UL	M. PRT	117EX	1
			100JP	1
464061301	250V T200MA	M. PRT	220GE	1
			240GE	1
			220SE	1
			220SC	1
			220WG	1
			240AU	1
			240UX	1
			220FR	1
			240AF	1
<b>CONNECTORS</b>				
471050500	TOP B5P-VH	1502-5		1
471060300	TOP B3B-EH	1502-5		2
471060400	TOP B4B-EH	1506		1
471060500	TOP B5B-EH	1502-5		1
471060600	TOP B6B-EH	1502-5		1
471060700	TOP B7B-EH	1502-5		1
		1506		1
471061100	B11B-EH	1506		1
471070300	TOP B3B-PH	1502-5		1
471070800	B8B-PH	1502-5		1
471071000	TOP B10B-PH	1502-5		1
471071200	TOP B12B-PH	1502-5		1
471090200	TOP 5095-02C	1502-5		1
<b>BC CONNECTOR</b>				
474009900	L-32	1502-5		1
<b>CARD FIT CONNECTORS</b>				
474012300	ZC-112	1502-5		1
474012400	ZC-113	1502-5		1
<b>SMCD CONNECTORS</b>				
474012500	FC-12 (1.6)	1502-5		1
474012600	FC-13 (1.6)	1502-5		1
<b>LV CONNECTOR</b>				
474012700	B2P-LV-TN	1502-5		1

PARTS CODE	PARTS NAME SPECIFICATIONS	P. C. BOARD	IDENTIFICATION NO. FUNCTION	Q' TY
<b>HEADER</b>				
474014702	14P 5332-14T2	1502-5		1
<b>HARNESSES</b>				
475001556	HNS-1556	M. PRT		1
475001557	HNS-1557	1506	BOARD IN	1
475001558	HNS-1558	1506	BOARD IN	1
475001559	HNS-1559	1506	BOARD IN	1
475001560	HNS-1560	1506	BOARD IN	1
475001561	HNS-1561	1502-5	BOARD IN	1
475001562	HNS-1562	1502-5	BOARD IN	1
475001563	HNS-1563	M. PRT		1
475001564	HNS-1564	1502-5	BOARD IN	1
475001565	HNS-1565	M. PRT		1
475001566	HNS-1566	1502-5	BOARD IN	1
475001567	HNS-1567	1507/8	BOARD IN	1
475001568	HNS-1568	1507/8	BOARD IN	1
475001569	HNS-1569	1502-5	BOARD IN	1
<b>IC SOCKET</b>				
480001324	32P DICF-32CS-E	1502-5		1
<b>FUSE HOLDER</b>				
515002300	S-N5057 #01	1502-5		2
<b>LITHIC BATTERY</b>				
520001700	CR2032	M. PRT		1
<b>BUSHINGS</b>				
540000300	SR-4R-4	M. PRT	117EX	1
540000400	SR-5P-4	M. PRT	240AU	1
540000500	SR-6W-1	M. PRT	220SE	1
			220FR	1
			220SC	1
			220WG	1
			220GE	1
			240AF	1
			240GE	1
			240UX	1

PARTS CODE	PARTS NAME SPECIFICATIONS	P. C. BOARD	IDENTIFICATION NO. FUNCTION	Q' TY
540000501	SR-6N3-4	M. PRT	117US 117CN	1 1
540016900	SR-5W-3	M. PRT	100JP	1
TEST PINS				
540007100	LC-2-G YELLOW	1506		2
540011901	LC-2-G	1506		1
SMCD HARNESSES				
545020310	12x140ESx10	1502-5		1
545020320	12x340ESx10	1502-5		1
HEAT SINKS				
560005500	WSD-25-BS-T	1506		1
560005700	KOC-C40745	M. PRT		1
560006900	WT-25-BS-T	1502-5		1
LED SPACERS				
575014100	L*4.5mm	1502-5		6
575014600	LS-15-4 L*4mm	1502-5		5
AC CORDS				
600000301	CLASS1 (SU429-58)	M. PRT	220WG 240GE 220SC 220GE 240UK 240AU 240AF	1 1 1 1 1 1 1
600000401	SAA (SU428-58)	M. PRT	240AF	1
600000501	BS PLUG (SU431A58)	M. PRT	220SE	1
600000901	SEV (SU430-58)	M. PRT	220FR	1
600001301	KP-4819D	M. PRT	117CN	1
600002000	SJT(SU338-56)	M. PRT	117US 117EX	1 1
600003900	SPT-2	M. PRT	117EX	1
600004100	DP-127-J06	M. PRT	100JP	1
POWER SW KNOB				
620018200		M. PRT		

PARTS CODE	PARTS NAME SPECIFICATIONS	P. C. BOARD	IDENTIFICATION NO. FUNCTION	Q' TY
PUSH SW KNOB				
620020800		M. PRT		1
KNOB				
620020900		M. PRT		9
ISOLATION SHEET				
630007500		M. PRT		1
COPPER SHEET				
630010100		M. PRT	117US 220WG	1 1
LCD WINDOW				
630014200		M. PRT		1
CARD GUIDE				
640088500		M. PRT		1
LOWER CASE				
640096500		M. PRT		1
COVER				
640096600		M. PRT		1
PSW SUPPORT				
640096700		1502-5		1
PSW BAR				
640096800		M. PRT		1
FIO PLATE				
640096900		M. PRT		1

PARTS CODE	PARTS NAME SPECIFICATIONS	P. C. BOARD	IDENTIFICATION NO. FUNCTION	Q' TY
<b>FRONT PANEL</b>				
641018300		M. PRT		1
<b>REAR PANEL</b>				
641018500		M. PRT		1
<b>VR SHIELD</b>				
641019900		1507/8		2
<b>RACK MOUNT ADAPTOR</b>				
641020000		M. PRT		2
<b>SPRING PLATE</b>				
044003000		M. PRT	117US 220VC	3 3
<b>PSV FRAME</b>				
646030200		M. PRT		1
<b>CT HOOD</b>				
646030500		M. PRT		1
<b>BATTERY HOLDER</b>				
649007400		1502-5		1

## VAROITUS

Paristo voi räjähtää, jos se on virheellisesti asennettu.  
Vaihda paristo ainoastaan laitevalmistajan suosittelemaan tyyppiin. Hävitä käytetty paristo valmistajan ohjeiden mukaisesti.

## ADVARSEL!

Lithiumbatteri – Eksplosionsfare ved fejlagtig handling.  
Udskiftning må kun ske med batteri af samme fabrikat og type.  
Levér det brugte batteri tilbage til leverand ø ren.

## ADVERSEL

Lithiumbatteri – Eksplosjonsfare.  
Ved utskifting benyttes kun batteri som anbefalt av apparatfabrikanten.  
Brukt batteri returneres apparatleverand ø ren.

## VARNING

Explosionsfara vid felaktigt batteribyte.  
Använd samma batterityp eller en ekvivalent typ som rekommenderas av apparattillverkaren.  
Kassera använt batteri enligt fabrikantens instruktion.

## CAUTION

Danger of explosion if battery is incorrectly replaced .  
Replace only with the same or equivalent type recommended by the equipment manufacturer .  
Discard used batteries according to manufacturer 's instructions.

# KORG

---

KORG INC. 15-12, Shimotakaido 1-chome, Suginami-ku, Tokyo 168